






Istruzioni di montaggio / Assembly instructions

FISSAGGIO A VITE PER LEGNO

ASSEMBLY FOR WOOD SCREW FIXING


MANDELLI 1953

Fissaggio a VITE PER LEGNO / Assembly for WOOD SCREW FIXING

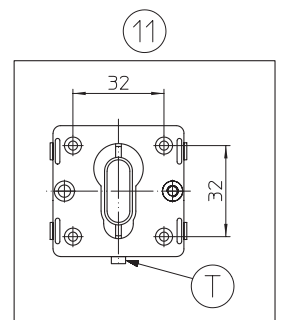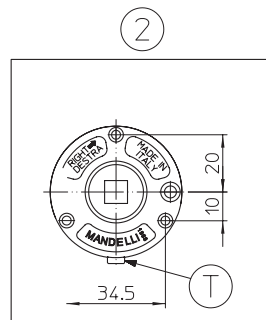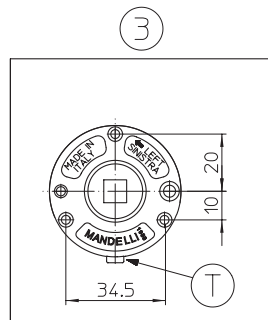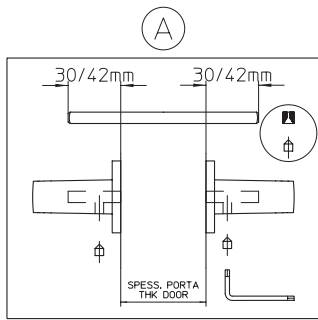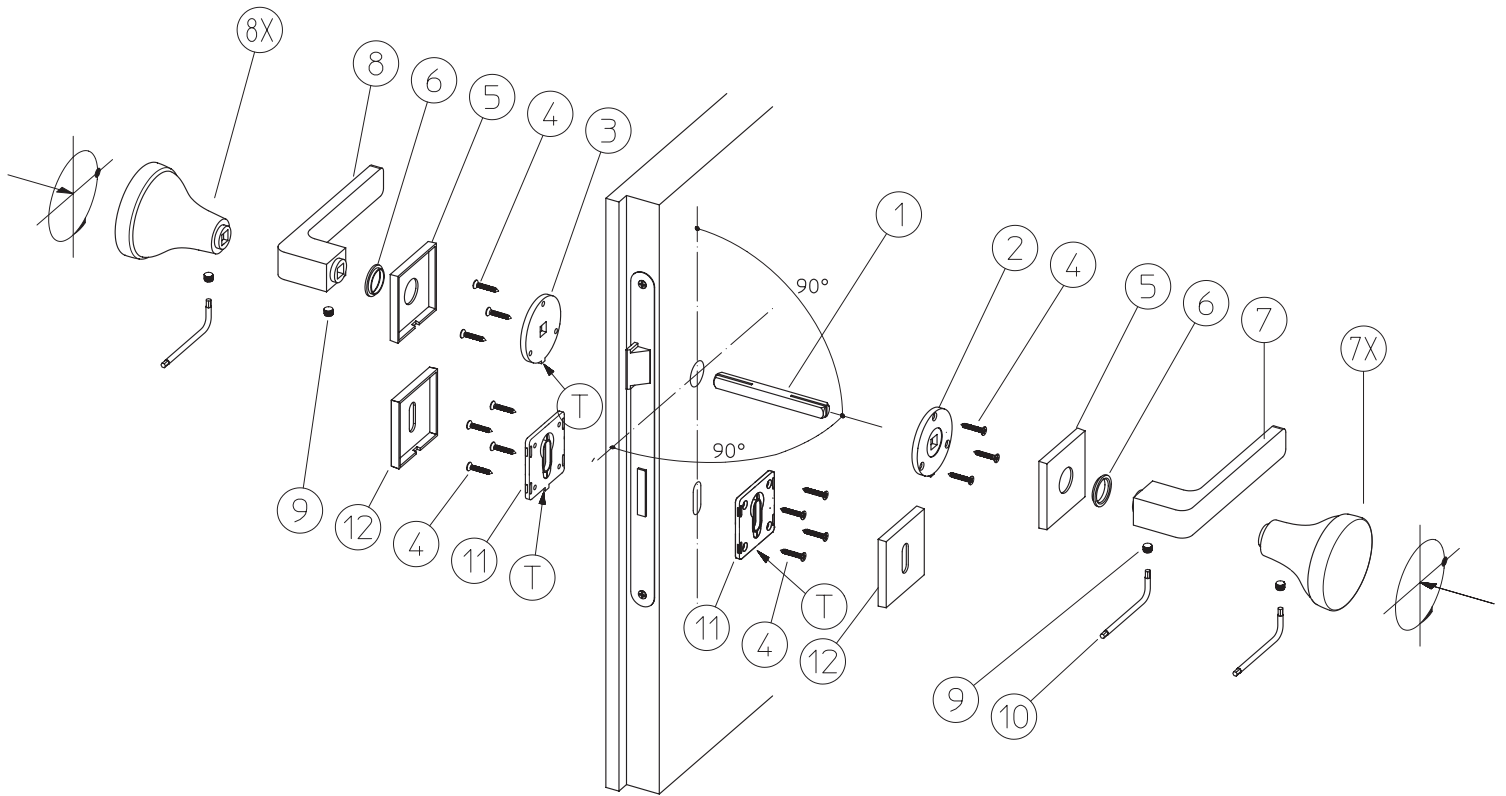

DURANTE IL MONTAGGIO PORRE ATTENZIONE CHE LA MANIGLIA RISULTI PERPENDICOLARE ALLA BATTUTA DELLA PORTA.

1. Inserire il quadro (1) nella serratura con la svasatura (A) verso il basso facendolo sporgere il quadro in egual modo su entrambi i lati, minimo 30mm, massimo 42mm.
2. inserire la molla destra (2) sul lato della maniglia destra (7), inserire la molla sinistra (3) sul lato della maniglia sinistra (8) avendo cura di tenere la tacca (T) verso il basso.
3. Fissare con le viti. (4)
4. Applicare le rosette. (5)
5. Inserire la maniglia (7) e la rondella (6) sul quadro. (1)
6. Ripetere l'operazione con la maniglia (8) e la rondella. (6)
7. Fissare le maniglie con il grano (9) mediante la chiave esagonale. (10)
8. Fissare i supporti (11) con le viti (4) avendo cura di tenere la tacca (T) verso il basso.
9. Applicare le bocchette (12) a pressione sui supporti.

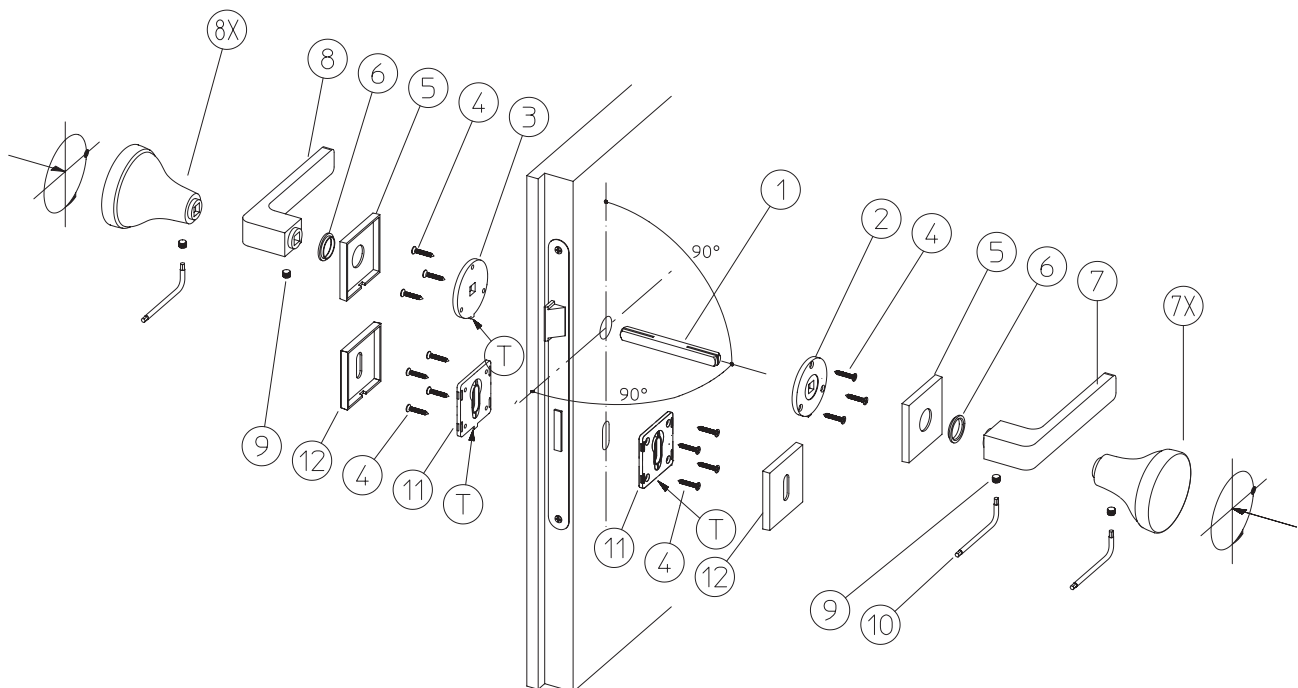

DURING ASSEMBLY, PAY ATTENTION THAT THE HANDLE IS PERPENDICULAR TO THE DOOR STOP.

1. Insert the spindle (1) in the lock follower with the slotted countersink (A) downward.
The spindle must be centred equally on both sides of the door minimum 30mm, maximum 42mm.
2. place the right spring assembly (2) onto the spindle for the right handle\knob (7), place the left spring assembly onto the spindle (3) for the left handle\knob (8) taking care to keep the notch (T) downwards.
3. Secure with wood screws provided. (4)
4. Push onto the spring assembly the roses. (5)
5. Insert the handle\knob (7) and washer (6) on the spindle. (1)
6. Repeat the operation on the other side , insert the handle\knob (8) and washer (6) on the spindle (1)
7. Secure the handles\knob with grub screw (9) using the hex key. (10)
8. place plastic escutcheon fixing plate (11) lugs into pre drilled holes with the notch (4) avendo cura di tenere la tacca (T) downwards and fix with wood screws provided.
9. Push fit the brass escutcheons (12) securly on to the plastic fixing plates. (11)

